

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product

#### DO NOT RETURN IT TO THE STORE

please contact us toll free at:

1 (800) 835-7665 FAX: 1 (904) 824-8233

customerexperience@hj-scott.com

Or write to:

Cue&Case A Global Division of Escalade Sports
Customer Service Department
190 Cumberland Park Drive
St. Augustine, FL 32095

Please visit our website at:


## www.cueandcase.com

When contacting Cue&Case please have your model number, proof of purchase (sales reciept stating you are original owner), date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number HJAVV/			
Date Code	2 - HJAW7 - 1118 - WJ		
Purchase D	ate		

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

IMPORTANT! READ EACH STEP IN THIS MANUAL BEFORE YOU BEGIN THE ASSEMBLY.

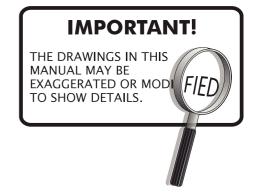

# TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS WICKED ICE 7FT HOCKEY TABLE

# **Tools Required:**

T1 - Wrench (Included)
Phillips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

# **Assembly Tips**

 
Make sure you understand the following tips before you begin to assemble your hockey table.

- 1. Start all bolts by hand before tightening.
- 2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS HOCKEY TABLE TOGETHER.

# HARDWARE IDENTIFIER (To Scale)




H1 - 8mm x 38mm Hex Bolt (8 pcs)



H2 - 8mm x 19mm Flat Washer (8 pcs)



 H3 - 3.5mm x 28mm Phillips Washer Head Screw (12 pcs)



H4 - 4mm x 25mm Phillips Washer Head Screw (8 pcs)




H5 - 4mm x 12mm Phillips Round Head Screw (4 pcs)




T1 - Wrench (1 pc)


# PARTS IDENTIFIER (Not to Scale)

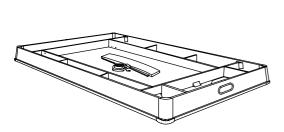


P1 - Hockey Table Cabinet (1 pc)

 


P2 - Right Leg (2 pcs)

 

P3 - Left Leg (2 pcs)

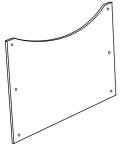

P4 - End Leg Panel (2 pcs)

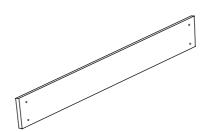

P5 - Side Leg Panel (2 pcs)



P6 - Puck Catcher (2 pcs)



P7 - Leg Leveler (4 pcs)

**NOTE: P4** End Leg Panels are packed under the table cabinet and underneath styrofoam block.

# ACCESSORY IDENTIFIER (Not to Scale)



A1 - Striker (2 pcs)



A2 - Puck (2 pcs)



A3 - Felt Pad (2 pcs)

**NOTE: A3** Felt Pads may already be attached to **A1** Strikers.

#### **PARTS REQUIRED:**

8 pcs - **H1** Hex Bolt 2 pcs - **P2** Right Leg 8 pcs - **H2** Flat Washer 2 pcs - **P3** Left Leg 1 pc - **P1** Hockey Table Cabinet 1 pc - **T1** Wrench


#### STEP 1:

To assemble this table, leave P1 Hockey Table Cabinet face down in the carton lid.

Attach P2 Right Legs and P3 Left Legs using H1 Hex Bolts with H2 Flat Washers as shown in FIGURE 1.

Do not tighten H1 Hex Bolts on this step until end of Step 3.

IMPORTANT NOTE: Be sure P2-Right Legs and P3-Left Legs are installed OUTSIDE of Support Beams as shown in FIGURE 1.

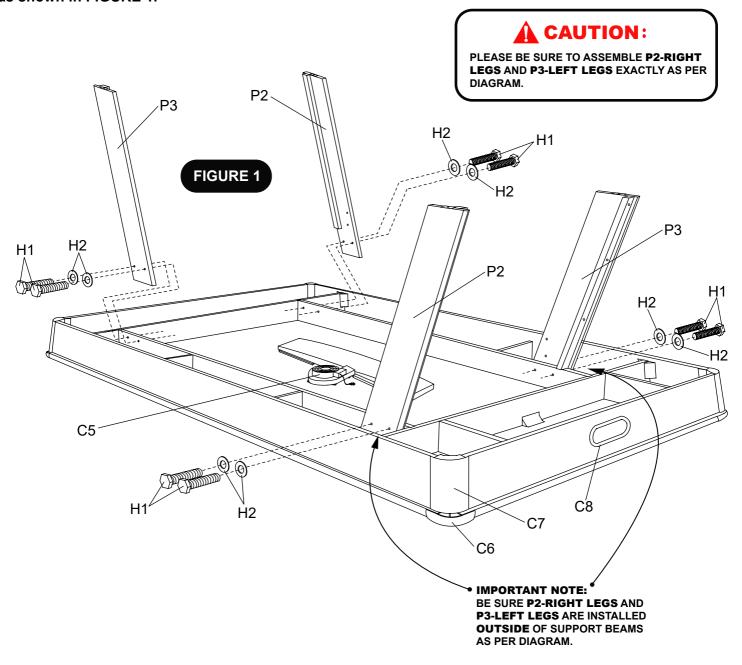


#### **PARTS REQUIRED:**

12 pcs - **H3** Phillips Washer Head Screw 2 pcs - **P4** End Leg Panel 2 pcs - **P5** Side Leg Panel

### STEP 2:


Attach P4 End Leg Panels between two legs of P2 Right Legs and P3 Left Legs using pre-drilled pilot holes with H3 Screws as shown in FIGURE 2. Tighten, but do not strip out H3 screws.

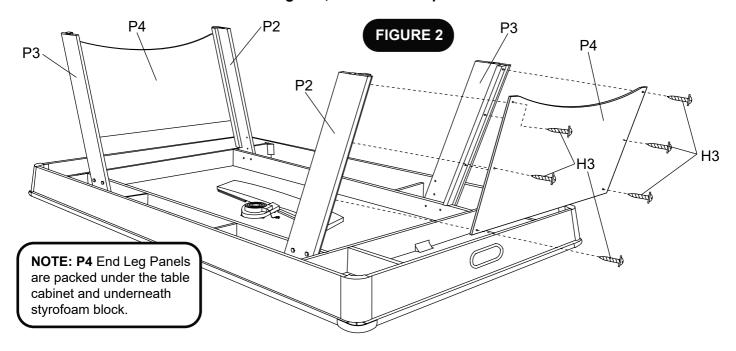

#### STEP 3:

Attach P5 Side Leg Panels between and inside P2 Right Legs and P3 Left Legs using pre-drilled pilot holes with H4 Screws as shown in FIGURE 3. Tighten, but do not strip out H4 screws.

Use T1 Allen Wrench to tighten all H1 Leg Bolts.

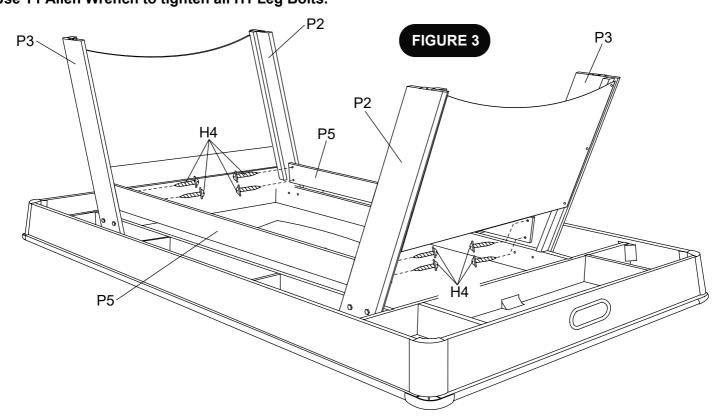

#### **PARTS REQUIRED:**


4 pcs - H5 Phillips Round Head Screw

2 pcs - **P6** Puck Catcher 4 pcs - **P7** Leg Leveler

#### STEP 4:

Attach **P6** Puck Catchers on the inside of end apron using pre-drilled pilot holes with **H5** Screws as shown in **FIGURE 4**. **Tighten, but do not strip out H5 screws.** 

Thread P7 Leg Levelers into the Leg assembly as shown in FIGURE 4.

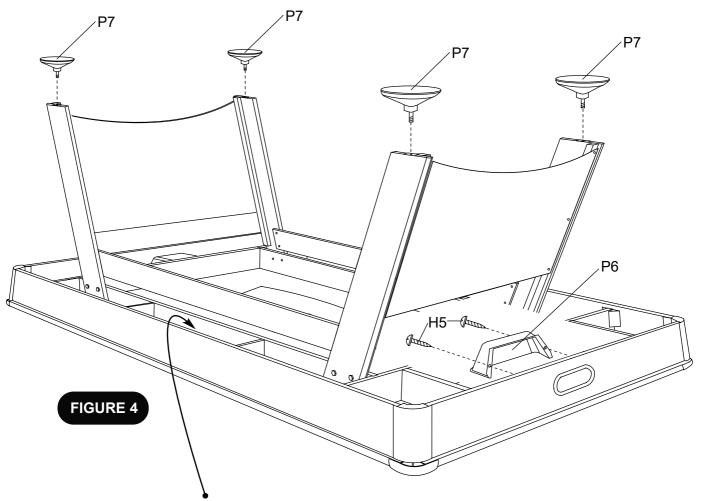

Under the table, remove screw using a small phillips screwdriver and open the battery box. Insert 4(four) AA batteries (not included) in the order of polarity as shown on the inside cover. Then close using a small phillips screwdriver.

(If the game will not be used for a long period of the time, we recommend that the batteries be removed)




THIS STEP REQUIRES FOUR OR MORE ADULTS.

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

DO NOT LIFT OR TURN THE TABLE OVER USING THE CORNERS AS THIS MAY DAMAGE THEM.

#### STEP 5:

Peel the backing off A3 Felt Pad and attach to A1 Striker as shown in FIGURE 5.

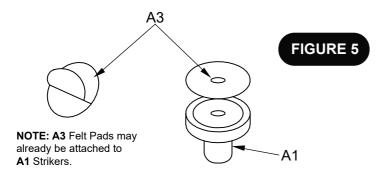

Congratulations! You have now assembled your HJ SCOTT Hockey Table. Please note the instructions below to ensure many years of trouble free use of your HJ SCOTT Hockey Table.

## CARE AND USE OF YOUR HJ SCOTT HOCKEY TABLE

- 1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
- 2. Spray furniture polish is recommended to both protect the play field and increase the puck speed. Apply and wipe off with the air motor on.
- 3. Use a carpenters level to properly level table using the leg levelers.
- 4. This product is intended for **INDOOR** use only.
- 5. **DO NOT** operate the motor if the cord is damaged in any way.
- 6. **DO NOT** sit, climb or lean on the table.
- 7. **DO NOT** drag the table when moving it. This will damage the legs.
- 8. **DO NOT** lift and move the table using the **CORNERS** as this may damage them.
- 9. **DO NOT** set drinks on the table.
- 10. It is suggested that this table be placed close to a wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.
- 11. The purchase of a billiard table cover will help protect and keep your table clean while not in use.

### **HOCKEY GAME RULES:**


- 1. This game is designed to be played with two (2) players, one at each end, or with four (4) players, two at each end of the game table.
- 2. Flip a coin to determine who will begin play, or a face-off can be held at the center of the table.
- 3. Play begins when the puck is placed on the playing surface. Players must hit the puck with the strikers and attempt to shoot into the opponent's goal.
- 4. One point is awarded when a puck is shot into the opponent's goal.
- 5. Winning the game: the winning score is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period of time.

### **ELECTRONIC SCORER OPERATION:**

- 1. Under the table, remove screw using a small phillips screwdriver and open the battery box. Insert 4(four) pcs AA batteries (not included) in the order of polarity as shown on the inside cover. Then close using a small phillips screwdriver.
  - (If the game will not be used for a long period of the time, we recommend that the batteries be removed).
- 2. Turn on the scorer using the on/off switch located on the scoring display. You will hear music and the Home and Visitor screens will show "00".
- 3. There is one pre-set period of 15 minutes which can be adjusted to 10 minutes, 5 minutes, or "No Time Limit" mode by pressing the "MINUTES" button.
- 4. Press the "START/RESET" button to start the game.
- 5. During Play When "START/RESET" button is pushed, the following will occur:
  - · Home and Visitor Score will reset to "00" and time will reset to it's original setting.
- 6. "Sound ON/OFF" Press this button while the game is on to turn the sound OFF and ON.
- 7. Once Home or Visitor reaches "99" points, Home or Visitor display will stop the scorer and keep flashing. Please reset it by pressing the "START/RESET" button.

**NOTE:** If no score has been made for 15 minutes, the scoreboard will automatically turn off. You can turn it on again by pressing the "START/RESET" button. However, we suggest turning the power off when the game will not be used for an extended period of time.

# **ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS**

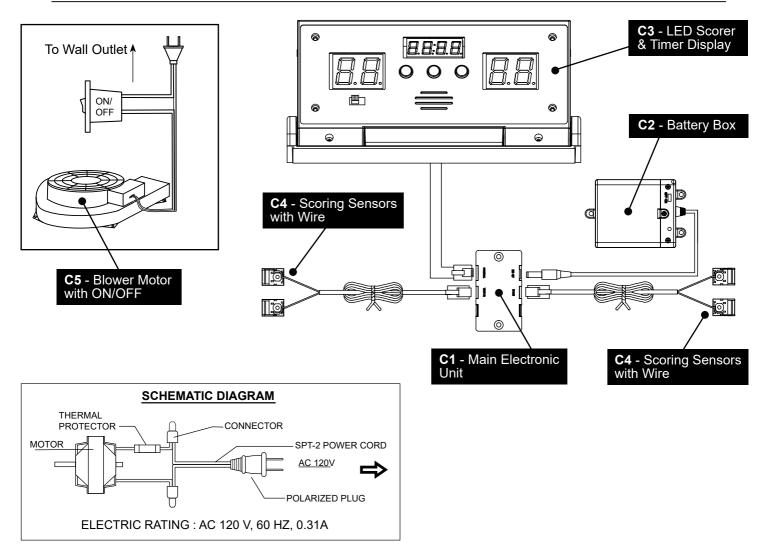

# **PRODUCT PARTS LIST FOR MODEL # HJAW7**

Key #	Part #	Description	Qty.
H1	HJAW7WJH1	8mm x 38mm Hex Bolt	8
H2	HJAW7WJH2	8mm x 19mm Flat Washer	8
H3	HJAW7WJH3	3.5mm x 28mm Phillips Washer Head Screw	12
H4	HJAW7WJH4	4mm x 25mm Phillips Washer Head Screw	8
H5	HJAW7WJH5	4mm x 12mm Phillips Round Head Screw	4
T1	HJAW7WJT1	Wrench	1
P1	HJAW7WJP1	Hockey Table Cabinet ( no blower motor )	1
P2	HJAW7WJP2	Right Leg	2
P3	HJAW7WJP3	Left Leg	2
P4	HJAW7WJP4	End Leg Panel	2
P5	HJAW7WJP5	Side Leg Panel	2 2
P6	HJAW7WJP6	Puck Catcher	2
P7	HJAW7WJP7	Leg Leveler	4
A1	HJAW7WJA1	Striker	2
A2	HJAW7WJA2	Puck	2
A3	HJAW7WJA3	Felt Pad	2
C1	HJAW7WJC1	Main Electronic Unit	1
C2	HJAW7WJC2	Battery Box	1
C3	HJAW7WJC3	LED Scorer and Timer Display	1
C4	HJAW7WJC4	Scoring Sensors with Wire	2
C5	HJAW7WJC5	Blower Motor with ON/OFF Switch	1
C6	HJAW7WJC6	Plastic Corner Cap	4
C7	HJAW7WJC7	Plastic Corner Post	4
C8	HJAW7WJC8	Puck Return Tray	2
K1	HJAW7WJK1	Hardware Kit	1
M1	HJAW7WJM1	Owner's Manual	1

# 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any AIR HOCKEY TABLE BY HJSCOTT Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: CUE&CASE warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above 90 days warranty period CUE&CASE shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1 (800) 835-7665 / Warranty Department

Or write us at:

Cue&Case Warranty Department
190 Cumberland Park Drive, St. Augustine, FL 32095

E-mail: customerexperience@hj-scott.com

Other than shipping requirements no charge will be made for such repair or replacement of inwarranty Products.CUE&CASE strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. CUE&CASE SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.